


DETAIL: EPDM Low Slope Roof

GENERAL DETAILS – PIPE PENETRATION – ROOF COATING RESTORATION

This detail drawing is intended to show the generally recommended procedure for dealing with the condition shown. Actual field conditions may vary. When such conditions vary slightly from the drawing, the intent and industry best practices are to be used. Any question, contact Aldo Products Company, Inc., Technical Department.

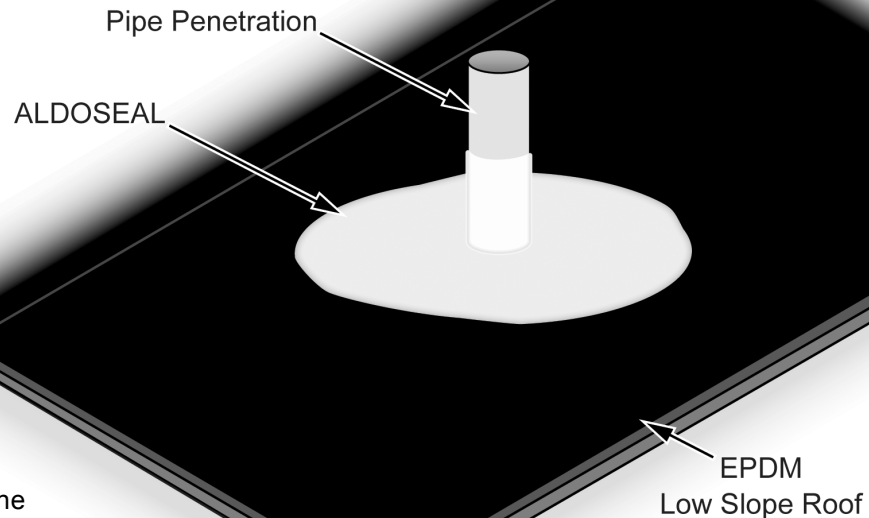

1. Apply a minimum of 50 wet mils of the ALDOSEAL product of choice around the base of pipe, extending 8-12" from the pipe.
2. Apply material up pipe a minimum of 6" up the pipe, feathering application towards the top of the pipe.
3. Make sure all voids are filled.